

**NOTE:** This adjustment is needed only when the non-hinge side top corner is lower than the hinge side top corner, therefore causing the doors to appear un-leveled.

1- Door alignment can be completed by loosening the bottom hinge pin and sliding the pin with the 3/4" wrench supplied and sliding the bottom of the door left or right (**Figure 1**).

2- Re-tighten the hinge pin and slide pin (**Figure 2**).

**NOTE:** Preventive maintenance program should include the checking, and tightening if necessary, of the hinge and slide pins.

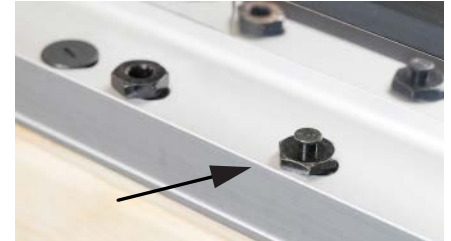


Figure 28



Figure 29