



ALL MODELS

RETRO-FIT LOCK INSTALLATION GUIDE

RETRO-FIT LOCK INSTALLATION GUIDE 032014



ALL MODELS RETRO-FIT LOCK INSTALLATION GUIDE

1. Position lock as shown (**Figure #1**) and mark location on the frame.
2. Remove lock, open door fully, hold lock firmly in position at the mark on the frame (**Figure# 2**) and venter punch frame using lock as a template.
3. Remove lock, drill a 9/64" hole.
4. Position lock and attach with the thread cutting screw provided (**Figure #2**).

Tools Required:

- Phillips Screw Driver
- Hammer
- Center Punch
- Electric Drill

Figure #1

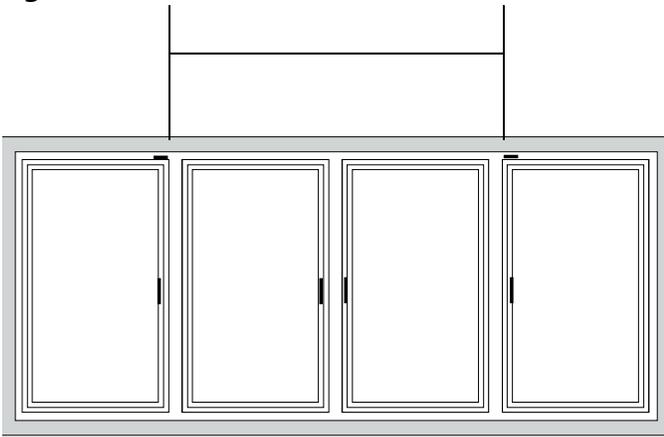


Figure #2

